

# TRIM-A-LAWN™

## OWNER'S MANUAL MODEL 154950 LE

*Seager model wt10010c*

### Service and Parts

This manual contains instructions for the proper use and maintenance of your trimmer. For service other than that covered in this manual, contact an authorized service dealer. To re-order parts, cutting line or other accessories contact your local dealer.

### Limited Warranty

This trimmer is warranted to be free of defects in material and workmanship for a period of two years after the date of purchase. This warranty does not include the engine, which is warranted by the manufacturer. Under normal use, parts of workmanship found defective will be replaced or repaired without charge to the customer. Delivery and pickup are not part of this warranty. Unauthorized alterations or the use of parts not of our manufacture or design may affect product performance and void this warranty. Misuse, damage or neglect is not covered through this warranty. This limited warranty applies for 90 days to commercial or rented machines.

## WELL DONE

Congratulations on your ownership of the Trim-A-Lawn deluxe trimmer, a revolutionary walk-behind trimmer. This trimmer rings in a new era in lawn and estate care. It functions as a conventional line trimmer, cleaning up around foundations, poles and trees (without scalping) and as a small lawn mower to get the areas that a rider won't reach. It is important that you read the manual.




## GETTING STARTED

Prior to assembling your unit, you need to ensure that all of the necessary items and parts are in the box. The packet containing this manual should also include an engine manual, a free sample of two-cycle oil a re-order card, and a warranty registration card. Pull out the carton's inner pack and you should find two sets of handles, one with the grip (the upper handle) and one handle with a hole in the middle of the handle (lower handle) as well as four wheels, and a bag containing the necessary parts to assemble your unit. If parts are missing, call 1-800-721-4852.

## STARTING YOUR MACHINE

Your Trim-A-Lawn deluxe trimmer is equipped with some easy-to-use features that make using your engine

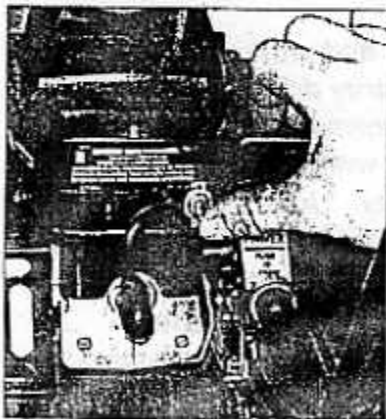

easy to operate. One is an on/off switch located on the back of the engine. Another key feature is

a primer which makes starting your engine easy.

To start your engine, turn the on/off switch to **ON**. Move the throttle control

to the middle position and prime the engine utilizing

the primer bulb on the engine. You may have to prime the engine heavily on its first use to start the engine.



Pull the starter cord with brisk strokes until the engine starts and then adjust the speed of the engine by moving the throttle.

An easy method to use to simplify the process of starting the engine is to push the trimmer forward with one hand, while pulling the cord with the other.

To turn the engine off, simply turn the on/off switch to the **OFF** position. Remember, do not attempt to start the engine without mixed fuel in the gas tank. Consult the engine manual for details.

## INDEX

Assembling Your Unit.....	Pg 5-7
Starting Your Machine.....	Pg 2
Mulching.....	Pg 3
Cutting Height Adjustments.....	Pg 3
Removing The Front Fork....	Pg 4
Mixing Gas/Oil.....	Pg 5
Preparation.....	Pg 5
Trimmer Storage.....	Pg 5
Exploding View of Parts... ..	Pg 8

## CUTTING HEAD

Your Trim-A-Lawn trimmer is equipped to make tall weeds short in a hurry, blending the elements of power and safety. It also eliminates the need to mess with spools of cutting line.


Changing the blades and line on your trimmer is an easy process than can be done in a matter of seconds and save frustration and heartache in the process.

The cutting head on your trimmer is equipped with a latch system, that makes changing blades or line as easy as opening and closing a latch. To change blades or Aeroline, simply turn your trimmer on its




side, with the gas tank up, and unlatch one of the three latches on the top plate of your cutting head system. Lift the

top plate (it's flexible enough to handle some bend) and easily remove the line or blades on one post and replace the blade or line. Repeat the step for the other two

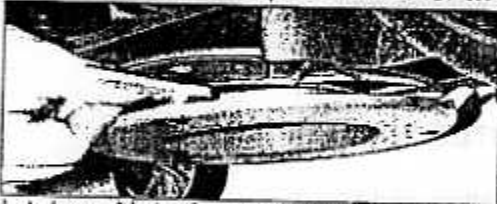

latches. Note from the picture the posts for placement of the blades or Aeroline.

The blade being used on your deluxe

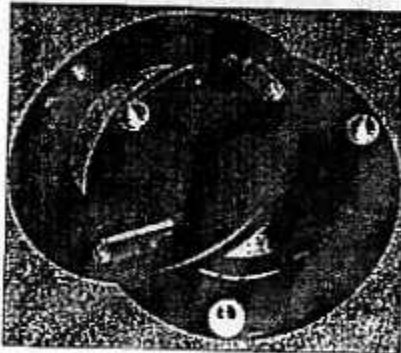

trimmer head is one of the most unique lawn care tools available in the market. The blade has a metal insert that is made of

durable steel, yet does not have a sharp

edge. The steel gives the blade durability and the toughness to tackle very difficult jobs, yet the lightweight nature of the blade ensures the safety so important with Trim-A-Lawn products.



The


Aeroline

included with your unit allows you the flexibility of tackling both the difficult and delicate projects around the yard. Use the Aeroline for trimming along the house or trees and use the blades to handle difficult and rugged areas or to cut grass.

## ADJUSTING THE CUTTING HEIGHT

The deluxe trimmer comes equipped with the ability to adjust the cutting height in both the front and back of the trimmer, ensuring a level cut. The front stabilizer fork (shown in the photo) offers three height adjustments and the back of the deck also offers three.


To adjust the height of the front wheels, simply remove the stub axle and the hair pin

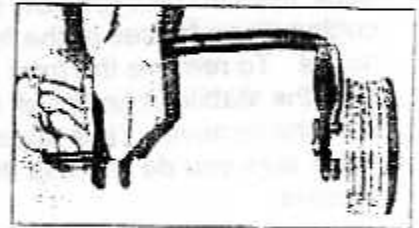

clip and move the stub axle through the desired cutting height and slide the wheel into place and then secure with the hair pin clip. Please use the special spring washer between the wheel and the fork and then use a regular washer on the outside of the wheel, for maximum stability. Use the same formula for the other side of the fork to ensure the stability of your new cutting height option.


To change the cutting height of the back wheels, simply remove the hair pin clip, washers and wheels in the dual hole axle, and slide the axle through the desired cutting height, making sure to line up the washers and wheels, before securing with a hair pin clip. Note from the picture how the

axle slides through matching holes in the rear wheel adapters, with your large wheel deluxe trimmer.

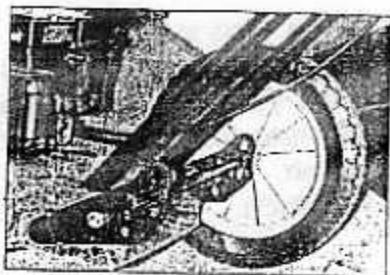

### REMOVING THE FRONT FORK

Your deluxe trimmer comes equipped with the option of removing the front stabilizer fork (the fork that holds the front wheels in

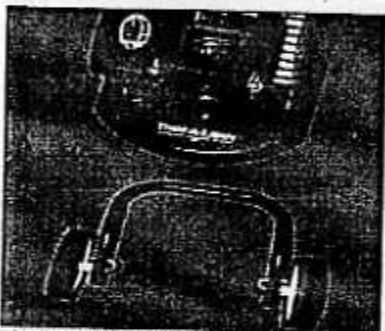

place) to allow for special cutting in hard-to-reach places. Because the line or blade extends beyond the

deck in the front and on both sides of the deck, this can be especially effective in cutting along fences or the foundation of a house. To remove the front fork, simply twist the stabilizer knobs off the top of the fork and remove. Take special care to make sure you do not lose the knobs in the process.

Take precaution in using the trimmer in this way to make sure you have the front of the trimmer raised when starting the engine.

### THE DEBRIS GUARD

If properly used, your trimmer will tackle tough jobs without a lot of thrown debris. Each trimmer has a debris deflector which attaches to the right side of the deck---giving you the



flexibility to go along foundations, fences or trees (the guard raises up) and other objects with little or no thrown debris.

The debris deflector is designed to keep objects from being thrown out of the side of the deck during the operation of the trimmer. Operating the trimmer without the debris deflector will not give you the same results and may be a safety hazard.

### PREPARATION

Your deluxe trimmer will be an efficient yard-care tool given proper attention to detail with the trimmer and the tasks at hand. Your safety is an ongoing concern at Trim-A-Lawn Corporation. To ensure your safety it is important that you review the following safety recommendations.

#### 1) DRESS FOR THE JOB

Wear substantial shoes and protective clothing while operating a Trim-A-Lawn trimmer. Use of safety glasses and hearing protection is also recommended.



#### 2) PROTECTION FOR CHILDREN

Do not allow children in the area when the trimmer is being operated. It is also recommended that no pre-teenage children be allowed to operate the trimmer. The trimmer is not a toy, and should not be in the hands of someone who might be inclined to use it as such---due to its lightweight, easy-to-use nature.

No one should ever put their hands or feet near the cutting head while the trimmer is in operation.



